

BLEED BEFORE YOU FILL YOUR LIGHTER

Bleed your lighter before each refill. This releases remaining air pressure from the last fill; allowing you to pump more fuel with each refill.

*Shown with Tune-Up Tool



iKAR®

Bleeding and Filling

- *To release all tank pressure, press on the inlet valve with a small screwdriver or a XIKAR® Tune-up Tool. Hold the lighter with the lighter's fill valve pointing down away from you until all gas pressure is released.*
- *Always fill your lighter in a well-ventilated area away from any heat source, sparks, or flame.*
- *To fill, hold lighter upside down and insert butane can tip directly on the fuel valve. Press down firmly for 5 seconds.*
- *Before igniting lighter, turn the flame adjustment wheel to low, wait 3-4 minutes for excess butane to evaporate and for butane inside the lighter to reach room temperature.*
- *Set flame level to desired height by turning flame adjustment wheel.*
- *XIKAR® Premium and High Performance Butane have near zero impurities and is highly recommended. Using inexpensive low-quality butane will damage your lighter.*



**Scan Here to learn
How to Fill and Bleed &
Set Up Your New Lighter**